

CODE 1 CONNECTING DIAGRAM <b>POTAIN</b>		Crane Type / Drawing No.:																						
		215	217	218	220	221	232A	308	309	313A	320	321A	321B	321C	325	326A	326B	326D	330	331	331B	332	334	336
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	
2	COMMON EMERGENCY STOP	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	
3	EMERGENCY STOP	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
4	COMMON TURN	12	12	12	12	12	12	12	12	12	12	12	12	-	12	-	-	-	12	-	12	12	12	
5	TURN RIGHT 1-4	2	2	2	2	2	2	2	2	2	2	2	-	2	-	-	-	2	-	2	2	2	-	
6	TURN LEFT 1-4	3	3	3	3	3	3	3	3	3	3	3	-	3	-	-	-	3	-	3	3	3	-	
7	TURN R / L 4-2/2-4	-	-	-	-	-	-	-	-	17	17	17	17	-	17	-	-	17	-	17	-	17	-	
8	TURN R / L 4-3/3-4	-	-	-	-	-	-	-	-	18	18	18	18	-	18	-	-	18	-	18	-	18	-	
9	POWER SUPPLY N. AC	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	
10	TURN R / L 4/4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
11	COM. HOIST ST1; TROLLEY	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	
12	LOWER 1-3	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	
13	LIFT 1-3-3	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	
14	TROLLEY FORWARD 1-3	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	
15	TROLLEY BACKWARD 1-3	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	
16	TROLLEY FWD/BWD 3-2 / 2-3	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	15	
17	COM. TRAV.; HOIS. ST.2, 3; TROLL. ST.3	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	
18	TRAVEL LEFT	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	
19	TRAVEL RIGHT	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	
20	LIFT / LOWER 3-2 / 2-3	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	14	
21	COMMON HORN; BYPASS	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	
22	LIFT / LOWER 3 / 3	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
23	TROLLEY FWD/BWD 3 / 3	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	16	
24	HORN NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
25	HORN NO	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	
26	BYPASS	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
27	COMMON BRAKE; ON/OFF	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	
28	BRAKE NC	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	
29	BRAKE NO	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
30	OFF NO	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31	OFF NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
32	ON	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	11	
33	COMMON ON	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	
38	COMMON TURN	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
39	TURN LEFT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
40	TURN RIGHT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
41	COMMON TURN ST.2; 3; 4	17	17	17	17	17	17	17	-	-	-	-	-	-	-	-	-	-	-	-	17	-	-	
42	TURN R / L 4-2/2-4	18	18	18	18	18	18	18	-	-	-	-	-	-	-	-	-	-	-	-	18	-	-	
43	TURN R / L 4-3/3-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
44	TURN R / L 4/4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
34	POTI "A"	-	-	-	-	-	-	-	-	-	-	-	18	-	18	18	18	-	18	-	-	-	18	
35	POTI "D"	-	-	-	-	-	-	-	-	-	-	-	17	-	17	17	17	-	17	-	-	-	17	
36	POTI "C"	-	-	-	-	-	-	-	-	-	-	-	3	-	3	3	3	-	3	-	-	-	3	
37	POTI "B"	-	-	-	-	-	-	-	-	-	-	-	2	-	2	2	2	-	2	-	-	-	2	
CABLE-NO.: Compact-V_D_R20_17		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
CODE 1 : ;1;::;::;::;::;																								
Note:																								

Subject to change without notice.

NO - Relay contacts are open in rest position.

NC - Relay contacts are closed in rest position.





































CODE 2 CONNECTING DIAGRAM FERGRU		Crane Type / Drawing No.:								
		412- -145	416- -519	116	412/145 519	825- 720	825			
		GHM_1	GHM_2	AF_1	AF_2					
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	11	11	1	11	11	11			
2	COMMON EMERGENCY STOP	11	11	1	11	11	11			
3	EMERGENCY STOP	2	2	2	2	2	2			
4	COMMON TURN	2	2	3	2	7	2			
5	TURN RIGHT 1-4	12	12	10	12	12	12			
6	TURN LEFT 1-4	6	6	11	6	6	6			
7	TURN R / L 4-2 / 2-4	-	-	12	-	-	-			
8	TURN R / L 4-3 / 3-4	-	-	-	-	-	-			
9	POWER SUPPLY N. AC	24	24	24	24	24	24			
10	TURN R / L 4 / 4	-	-	-	-	-	-			
11	COM. LOW.; TROL. BWD.; ST3; TRAV.	3	3	4	2	3	7			
12	LOWER 1-3	9	9	7	9	9	9			
13	TROLLEY BACKWARD 1-3	17	17	14	17	1	1			
14	TROLLEY FWD/BWD 3 / 3	-	-	-	-	-	-			
15	TRAVEL LEFT	-	-	-	-	-	-			
16	TRAVEL RIGHT	-	-	-	-	-	-			
17	COM. OFF; BYPASS; LIF.; TROL. FWD.; ST2	3	3	4	2	3	7			
18	BYPASS	-	-	-	-	-	-			
19	OFF	-	-	-	-	-	-			
20	LIFT 1-3-3	8	8	6	8	8	8			
21	COMMON HOIST ST2; 3	2	2	3	2	2	7			
22	TROLLEY FORWARD 1-3	10	10	13	10	10	10			
23	TROLLEY FWD/BWD 3-2 / 2-3	-	-	-	-	-	-			
24										
25	LIFT / LOWER 3-2 / 2-3	5	5	8	5	5	14			
26	LIFT / LOWER 3 / 3	-	-	9	-	-	13			
27	COMMON ON; HORN	2	2	2	2	2	2			
28	HORN NC	-	-	-	-	-	-			
29	HORN NO	7	7	5	7	7	3			
30	ON NO	4	4	3	4	4	4			
31	ON NC	-	-	-	-	-	-			
32	BRAKE	-	-	-	-	-	-			
33	COMMON BRAKE	-	-	-	-	-	-			
34										
38	COMMON TURN	-	-	-	-	-	-			
39	TURN LEFT 1-4	-	-	-	-	-	-			
40	TURN RIGHT 1-4	-	-	-	-	-	-			
41	COMMON TURN ST.2; 3; 4	-	-	-	-	-	-			
42	TURN R / L 4-2 / 2-4	-	-	-	-	-	-			
43	TURN R / L 4-3 / 3-4	-	-	-	-	-	-			
44	TURN R / L 4 / 4	-	-	-	-	-	-			
34	POTI "A"	-	-	-	-	-	-			
35	POTI "D"	-	-	-	-	-	-			
36	POTI "C"	-	-	-	-	-	-			
37	POTI "B"	-	-	-	-	-	-			
Compact-V_D R20_10Compact-V_D_R20_7		01	02	03	04	05	06	07	08	09
CODE 2 : ;;2;-;-;-;-;-;		Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!								
Note:										

Subject to change without notice.

CODE 2 CONNECTING DIAGRAM FERRO		Crane Type / Drawing No.:								
		860.03 330	860.03 330	860.05 437	860.05 437	860.09 482	860.09 487			
		SR12	SR14	SR16	SR18	SR22	SR25			
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	11	11	11	11	16	16			
2	COMMON EMERGENCY STOP	11	11	11	11	16	16			
3	EMERGENCY STOP	2	2	2	2	4	4			
4	COMMON TURN	2	2	2	2	1	1			
5	TURN RIGHT 1-4	12	12	12	12	9	9			
6	TURN LEFT 1-4	6	6	6	6	6	6			
7	TURN R / L 4-2 / 2-4	-	-	-	-	15	15			
8	TURN R / L 4-3 / 3-4	-	-	-	-	-	-			
9	POWER SUPPLY N. AC	1	1	T	T	8	24			
10	TURN R / L 4 / 4	-	-	-	-	-	-			
11	COM. LOW.; TROL. BWD.; ST3; TRAV.	2	2	2	2	1	1			
12	LOWER 1-3	9	9	9	9	4	4			
13	TROLLEY BACKWARD 1-3	17	17	17	17	10	10			
14	TROLLEY FWD/BWD 3 / 3	-	-	-	-	-	-			
15	TRAVEL LEFT	-	-	-	-	-	8			
16	TRAVEL RIGHT	-	-	-	-	-	7			
17	COM. OFF; BYPASS; LIF.; TROL. FWD.; ST2	3	3	2	2	1	1			
18	BYPASS	-	-	-	-	-	-			
19	OFF	-	-	-	-	-	-			
20	LIFT 1-3-3	8	8	8	8	5	5			
21	COMMON HOIST ST2; 3	2	2	2	2	13	13			
22	TROLLEY FORWARD 1-3	10	10	10	10	11	11			
23	TROLLEY FWD/BWD 3-2 / 2-3	-	-	-	-	-	-			
24										
25	LIFT / LOWER 3-2 / 2-3	5	5	5	5	14	14			
26	LIFT / LOWER 3 / 3	-	-	-	-	12	12			
27	COMMON ON; HORN	2	2	2	2	4	4			
28	HORN NC	-	-	-	-	-	-			
29	HORN NO	7	7	7	7	-	-			
30	ON NO	4	4	4	4	3	3			
31	ON NC	-	-	-	-	-	-			
32	BRAKE	-	-	-	-	-	-			
33	COMMON BRAKE	-	-	-	-	-	-			
34										
38	COMMON TURN	-	-	-	-	-	-			
39	TURN LEFT 1-4	-	-	-	-	-	-			
40	TURN RIGHT 1-4	-	-	-	-	-	-			
41	COMMON TURN ST.2; 3; 4	-	-	-	-	-	-			
42	TURN R / L 4-2 / 2-4	-	-	-	-	-	-			
43	TURN R / L 4-3 / 3-4	-	-	-	-	-	-			
44	TURN R / L 4 / 4	-	-	-	-	-	-			
34	POTI "A"	-	-	-	-	-	-			
35	POTI "D"	-	-	-	-	-	-			
36	POTI "C"	-	-	-	-	-	-			
37	POTI "B"	-	-	-	-	-	-			
Compact-V_D R20_10Compact-V_D_R20_8		01	02	03	04	05	06	07	08	09
CODE 2 : ;;2;-;-;-;-;-;		Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!								
Note:										

NO - Relay contacts are open in rest position.

NC - Relay contacts are closed in rest position.







CODE 6 CONNECTING DIAGRAM <b>LIEBHERR</b>		Crane Type / Drawing No.:								
		4005	4005							
		21206	21263							
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	2	2							
2	COMMON EMERGENCY STOP	2	2							
3	EMERGENCY STOP	5	5							
4	COMMON TURN	3	3							
5	TURN RIGHT 1-4	7	7							
6	TURN LEFT 1-4	8	8							
7	TURN R / L 4-2 / 2-4	21	9							
8	TURN R / L 4-3 / 3-4	22	10							
9	POWER SUPPLY N. AC	1	1							
10	TURN R / L 4 / 4	9	11							
11	COM. HOIST; WORK/MONTAGE	3	3							
12	LOWER 1-3	18	20							
13	LIFT 1-3-3	17	19							
14	LIFT / LOWER 3-2 / 2-3	19	21							
15	LIFT / LOWER 3 / 3	20	22							
16	WORK / MONTAGE POS.3	-	18							
17	COM. TROL.; TRAVEL	3	3							
18	TROLLEY FORWARD 1-3	15	16							
19	TROLLEY BACKWARD 1-3	14	15							
20	TROLLEY FWD/BWD 3-2 / 2-3	16	17							
21	COMMON BRAKE; ON	5	5							
22	TRAVEL LEFT	13	14							
23	TRAVEL RIGHT	12	13							
24	BRAKE NC									
25	BRAKE NO	10	12							
26	ON	4	4							
27	COM. HORN; ON / OFF	5	5							
28	HORN NC									
29	HORN NO	6	6							
30	ON / OFF NO (set/reset)	-	-							
31	ON / OFF NC (set/reset)									
32	BYPASS	-	23							
33	COMMON BYPASS	-	3							
38	COMMON TURN	-	-							
39	TURN LEFT 1-4	-	-							
40	TURN RIGHT 1-4	-	-							
41	COMMON TURN ST.2; 3; 4	-	-							
42	TURN R / L 4-2 / 2-4	-	-							
43	TURN R / L 4-3 / 3-4	-	-							
44	TURN R / L 4 / 4	-	-							
34	POTI "A"	-	-							
35	POTI "D"	-	-							
36	POTI "C"	-	-							
37	POTI "B"	-	-							
CABLE-NO.: Compact-V D_R20_16		01	02	03	04	05	06	07	08	09
CODE 6 : ;-;2;3;-;-;-;-;-;		Note: Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!								

Subject to change without notice.

NO - Relay contacts are open in rest position.

CODE 6 CONNECTING DIAGRAM		Crane Type / Drawing No.:								
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC									
2	COMMON EMERGENCY STOP									
3	EMERGENCY STOP									
4	COMMON TURN									
5	TURN RIGHT 1-4									
6	TURN LEFT 1-4									
7	TURN R / L 4-2 / 2-4									
8	TURN R / L 4-3 / 3-4									
9	POWER SUPPLY N. AC									
10	TURN R / L 4 / 4									
11	COM. HOIST; WORK/MONTAGE									
12	LOWER 1-3									
13	LIFT 1-3-3									
14	LIFT / LOWER 3-2 / 2-3									
15	LIFT / LOWER 3 / 3									
16	WORK / MONTAGE POS.3									
17	COM. TROL.; TRAVEL									
18	TROLLEY FORWARD 1-3									
19	TROLLEY BACKWARD 1-3									
20	TROLLEY FWD/BWD 3-2 / 2-3									
21	COMMON BRAKE; ON									
22	TRAVEL LEFT									
23	TRAVEL RIGHT									
24	BRAKE NC									
25	BRAKE NO									
26	ON									
27	COM. HORN; ON / OFF									
28	HORN NC									
29	HORN NO									
30	ON / OFF NO (set/reset)									
31	ON / OFF NC (set/reset)									
32	BYPASS									
33	COMMON BYPASS									
38	COMMON TURN									
39	TURN LEFT 1-4									
40	TURN RIGHT 1-4									
41	COMMON TURN ST.2; 3; 4									
42	TURN R / L 4-2 / 2-4									
43	TURN R / L 4-3 / 3-4									
44	TURN R / L 4 / 4									
34	POTI "A"									
35	POTI "D"									
36	POTI "C"									
37	POTI "B"									
CABLE-NO.: Compact-V D_R20_16		01	02	03	04	05	06	07	08	09
CODE 6 : ;-;2;3;-;-;-;-;-;		Note: Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!								

NC - Relay contacts are closed in rest position.

CODE 6 CONNECTING DIAGRAM PKZ		Crane Type / Drawing No.:																						
															204I	WOLF	Type I	Type II	Type III		0017-			
		2008_2	2010/2_2	2011_2	2510_2	3010_2	3012_2	3210_2	3212_2	3512_2	3610_2	3810_2	4010_2	4112_3	4112_4	4010M_2	2210_4	2210_5	2210_6	T20_2	CK3810	4310	4512	
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
1	POWER SUPPLY PH. AC	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
2	COMMON EMERGENCY STOP	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
3	EMERGENCY STOP	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	6	2	2	2	
4	COMMON TURN	4	3	4	17	17	17	17	17	17	17	11	17	17	17	17	17	17	17	19	17	17	17	
5	TURN RIGHT 1-4	13	12	13	12	12	12	12	12	12	12	12	12	12	12	12	12	12	12	13	12	12	12	
6	TURN LEFT 1-4	12	13	12	13	13	13	13	13	13	13	13	13	13	13	13	13	13	13	14	13	13	13	
7	TURN R / L 4-2 / 2-4	-	-	-	-	-	-	-	-	-	-	16	14	-	-	16	16	-	-	-	-	-	-	
8	TURN R / L 4-3 / 3-4	-	-	-	-	-	-	-	-	-	-	17	15	-	-	-	-	-	-	-	-	-	-	
9	POWER SUPPLY N. AC	16	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	24	4	24	24	24	
10	TURN R / L 4 / 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
11	COM. HOIST; WORK / MONTAGE	4	3	4	17	17	17	17	17	17	17	11	17	17	17	17	17	17	17	2	17	17	17	
12	LOWER 1-3	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	16	6	6	6	
13	LIFT 1-3-3	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	15	5	5	5	
14	LIFT / LOWER 3-2 / 2-3	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	7	17	7	7	7	
15	LIFT / LOWER 3 / 3	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	18	8	8	8	
16	WORK / MONTAGE POS.3	-	-	-	-	-	-	-	-	-	-	-	-	-	19	-	-	-	-	-	19	19	19	
17	COMMON TROLLEY; TRAVEL	4	3	4	17	17	17	17	17	17	17	11	17	17	17	17	17	17	17	2	17	17	17	
18	TROLLEY FORWARD 1-3	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	9	11	9	9	9	
19	TROLLEY BACKWARD 1-3	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	12	10	10	10	
20	TROLLEY FWD/BWD 3-2 / 2-3	-	-	-	18	18	18	18	18	18	18	18	11	18	18	18	18	18	18	-	18	18	18	
21	COMMON BRAKE; ON	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	6	2	2	2	
22	TRAVEL LEFT	15	18	-	20	20	20	20	16	16	20	20	15	19	21	20	-	-	-	-	21	21	-	
23	TRAVEL RIGHT	14	17	-	19	19	19	19	15	15	19	19	14	18	20	19	-	-	-	-	20	20	-	
24	BRAKE NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	8	-	-	-	
25	BRAKE NO	-	11	-	11	11	11	11	11	11	11	11	19	16	11	11	-	-	-	-	11	11	11	
26	ON	3	3	11	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	5	4	4	4	
27	COMMON HORN; ON / OFF	4	3	4	17	17	17	17	17	17	17	11	17	17	17	17	17	17	17	2	17	17	2	
28	HORN NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
29	HORN NO	11	4	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
30	ON / OFF NO (set/reset)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31	ON / OFF NC (set/reset)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
32	BYPASS	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
33	COMMON BYPASS	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
38	COMMON TURN ST.1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
39	TURN RIGHT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
40	TURN LEFT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
41	COMMON TURN ST.2; 3; 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
42	TURN R / L 4-2 / 2-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
43	TURN R / L 4-3 / 3-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
44	TURN R / L 4 / 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
34	POTI "A"	-	14	-	14	14	14	14	14	14	14	-	-	14	14	-	-	14	-	14	14	14	14	
35	POTI "D"	-	15	-	15	15	15	15	15	15	15	-	-	15	15	-	-	15	-	15	15	15	15	
36	POTI "C"	-	16	-	16	16	16	16	16	16	16	-	-	16	16	-	-	16	-	16	16	16	16	
37	POTI "B"	-	16	-	16	16	16	16	16	16	16	-	-	16	16	-	-	16	-	16	16	16	16	
CABLE-NO.: Compact-V_D_R20_16		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
CODE 6 : ;;2;3;::;::;::		Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!																						

Note:

Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!

Subject to change without notice.

NO - Relay contacts are open in rest position.

NC - Relay contacts are closed in rest position.







CODE 14 CONNECTING DIAGRAM <b>PEINER</b>		Crane Type / Drawing No.:																						
		9	7337	2256	92747	92747	5371		ab024	ab001	ab	ab210	8416	8317		ab	16607	ab			7353	6377C		
		100	101	102	103	105	107	108	201_1	201_2	202_1	202_2	203_1	203_2	203_3	203_4	205	206	308_1	308_2	104/1	104/2	106/1_1	106/1_2
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	
1	POWER SUPPLY PH. AC	2	2	1	1	1	1	1	1	1	1	1	1	1	2	1	1	1	1	1	1	1	1	
2	COMMON EMERGENCY STOP	3	3	1	1	1	1	1	1	1	1	1	1	1	3	1	1	1	1	1	1	1	1	
3	EMERGENCY STOP	1	1	3	3	3	3	3	3	3	3	3	3	3	1	3	3	3	3	3	3	3	3	
4	COMMON TURN	1	1	5	22	22	22	9	9	9	9	5	9	9	1	5	5	5	5	9	9	5	9	
5	TURN RIGHT 1-4	12	12	10	15	15	15	14	15	15	15	15	15	15	10	11	11	11	11	14	14	10	14	
6	TURN LEFT 1-4	11	11	11	16	16	16	15	14	14	14	10	14	14	9	10	10	10	10	15	15	11	15	
7	TURN R / L 4-2 / 2-4	-	15	-	17	17	13	16	-	-	-	12	-	-	16	11	12	12	12	16	16	12	-	
8	TURN R / L 4-3 / 3-4	-	-	-	-	-	-	17	-	-	-	13	-	-	-	13	13	13	13	-	-	-	-	
9	POWER SUPPLY N. AC	24	24	16	24	24	Ext.	24	24	24	5	24	24	24	24	24	24	24	24	24	24	24	24	
10	TURN R / L 4 / 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	22	-	-	-	-	-	
11	COM. HOIST ST.1; TROLLEY	1	1	5	22	22	22	9	9	9	9	5	9	9	9	1	5	5	5	5	9	9	5	9
12	LOWER 1-3	6	6	7	11	11	11	11	11	11	11	7	11	11	11	6	7	7	7	7	11	11	7	11
13	LIFT 1-3-3	5	5	6	10	10	10	10	10	10	10	6	10	10	10	6	6	6	6	6	10	10	6	10
14	TROLLEY FORWARD 1-3	9	9	12	18	18	18	19	18	18	18	15	18	18	18	13	15	15	15	18	18	13	18	
15	TROLLEY BACKWARD 1-3	10	10	13	19	19	19	20	19	19	19	16	19	19	19	14	16	16	16	19	19	14	19	
16	TROLLEY FWD/BWD 3-2 / 2-3	-	-	-	-	-	24	21	-	-	-	17	-	-	-	17	17	-	17	-	-	-	-	
17	COM. TRAV.; HOIS. ST.2, 3; BYPASS	1	1	5	22	22	22	9	9	9	9	5	9	9	9	1	5	5	5	9	9	5	9	
18	TRAVEL LEFT	13	13	14	20	20	20	22	20	20	-	18	20	20	20	15	18	18	18	18	20	20	15	20
19	TRAVEL RIGHT	14	14	15	21	21	21	23	21	21	-	19	21	21	21	16	19	19	19	19	21	21	16	21
20	LIFT / LOWER 3-2 / 2-3	7	7	8	9	9	9	12	12	12	12	8	12	12	12	7	8	8	8	8	12	12	8	12
21	COMMON ON; HORN	1	1	3	3	3	3	3	3	3	3	3	3	3	3	1	3	3	3	3	3	3	3	3
22	LIFT / LOWER 3 / 3	8	8	9	8	8	8	13	13	13	13	9	13	13	13	8	9	9	9	9	13	13	9	13
23	BYPASS	-	-	-	-	-	-	-	-	-	-	-	-	-	-	20	-	-	-	-	-	-	-	
24	HORN NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
25	HORN NO	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
26	ON	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
27	COMMON 0-POSITION	-	-	-	23, 6, 5	23, 6, 5	23, 6, 5	7, 6, 5	-	-	-	-	-	3	-	-	-	-	-	-	-	-	7, 6, 5	
28	0-POSITION NC	-	-	-	22	22	22	9	-	-	-	-	-	-	-	-	-	-	-	-	-	-	9	
29	0-POSITION NO	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
30	0-POSITION HOIST NO	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31	0-POSITION HOIST NC	-	-	-	7	7	7	8	-	-	-	-	-	-	-	-	-	-	-	-	-	-	8	
32	BRAKE	-	16	-	-	-	17	18	17	17	17	14	17	17	17	12	14	14	14	14	17	17	17	23
33	COMMON BRAKE	-	1	-	-	-	14	9	9	9	9	5	9	9	9	1	5	5	5	5	9	9	5	22
38	COMMON TURN	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
39	TURN LEFT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
40	TURN RIGHT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
41	COMMON TURN ST.2; 3; 4	-	-	-	-	-	-	16	16	16	-	16	16	-	-	-	-	-	-	-	-	-	17	
42	TURN R / L 4-2 / 2-4	-	-	-	-	-	-	22	22	22	-	22	22	-	-	-	-	-	-	-	-	-	16	
43	TURN R / L 4-3 / 3-4	-	-	-	-	-	-	23	23	23	-	23	23	-	-	-	-	-	-	-	-	-	-	
44	TURN R / L 4 / 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
34	POTI "A"																							
35	POTI "D"																							
36	POTI "C"																							
37	POTI "B"																							
CABLE-NO.: Compact-V_D_R20_20		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
CODE 14 : ;:;2;3;4;::;::;		Note: Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!																						

Subject to change without notice.

NO - Relay contacts are open in rest position.

NC - Relay contacts are closed in rest position.

CODE 14 CONNECTING DIAGRAM <b>PEINER</b>		Crane Type / Drawing No.:																						
		ab 14400 9819a 76027 9819a 17084 515 106/2 107/1 107/2 108/1 108/2_1 108/2_2 108/2_3 203/1_1 203/1_2 205/1 SK56_1 SK56_2 SK76 203/1																						
		Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
2	COMMON EMERGENCY STOP	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
3	EMERGENCY STOP	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
4	COMMON TURN	9	22	9	9	9	9	9	9	5	5	9	9	9	9	9	9	9	9	9	9	9	9	
5	TURN RIGHT 1-4	14	15	14	15	14	14	14	15	11	11	14	14	14	15	15	15	15	15	15	15	15	15	
6	TURN LEFT 1-4	15	16	15	14	15	15	15	14	10	10	15	15	15	14	14	14	14	14	14	14	14	14	
7	TURN R / L 4-2 / 2-4	-	13	-	16	16	16	16	-	12	12	16	16	16	-	-	-	-	-	-	-	-	-	
8	TURN R / L 4-3 / 3-4	-	-	-	17	17	17	17	-	13	13	17	17	17	-	-	-	-	-	-	-	-	-	
9	POWER SUPPLY N. AC	Ext.	Ext.	Ext.	18	18	Ext.	Ext.	5	24	24	32	32	32	5	5	5	5	5	5	5	5	5	
10	TURN R / L 4 / 4	-	-	-	-	-	18	18	-	-	22	-	-	-	-	-	-	-	-	-	-	-	-	
11	COM. HOIST ST.1; TROLLEY	9	22	9	9	9	9	9	9	5	5	9	9	9	9	9	9	9	9	9	9	9	9	
12	LOWER 1-3	11	11	11	11	11	11	11	11	7	7	11	11	11	11	11	11	11	11	11	11	11	11	
13	LIFT 1-3-3	10	10	10	10	10	10	10	10	6	6	10	10	10	10	10	10	10	10	10	10	10	10	
14	TROLLEY FORWARD 1-3	19	18	18	19	19	19	19	18	15	15	19	19	19	18	18	18	18	18	18	18	18	18	
15	TROLLEY BACKWARD 1-3	20	19	19	20	20	20	20	19	16	16	20	20	20	19	19	19	19	19	19	19	19	19	
16	TROLLEY FWD/BWD 3-2 / 2-3	21	24	24	21	21	21	21	24	17	17	-	21	21	7	7	7	7	7	7	7	7	7	
17	COM. TRAV.; HOIS. ST.2, 3; BYPASS	9	22	9	9	9	9	9	9	5	5	9	9	9	9	9	9	9	9	9	9	9	9	
18	TRAVEL LEFT	22	20	20	22	22	22	22	20	18	18	22	22	22	20	20	20	20	20	20	20	20	20	
19	TRAVEL RIGHT	23	21	21	23	23	23	23	21	19	19	23	23	23	21	21	21	21	21	21	21	21	21	
20	LIFT / LOWER 3-2 / 2-3	12	9	12	12	12	12	12	12	8	8	12	12	12	12	12	12	12	12	12	12	12	12	
21	COMMON ON; HORN	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	
22	LIFT / LOWER 3 / 3	13	8	13	13	13	13	13	13	9	9	13	13	13	13	13	13	13	13	13	13	13	13	
23	BYPASS	-	-	-	-	-	-	-	-	-	-	-	-	-	18	18	18	18	18	18	18	18	18	
24	HORN NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
25	HORN NO	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	
26	ON	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	
27	COMMON 0-POSITION	7, 6, 5	23, 6, 5	7, 6, 5	7, 6, 5	7, 6, 5	7, 6, 5	7, 6, 5	-	-	-	7, 6, 5	7, 6, 5	7, 6, 5	-	-	-	-	-	-	-	-	-	
28	0-POSITION NC	9	22	9	9	9	9	9	-	-	-	9	9	9	-	-	-	-	-	-	-	-	-	
29	0-POSITION NO	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
30	0-POSITION HOIST NO	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
31	0-POSITION HOIST NC	8	7	8	8	8	8	8	-	-	-	8	8	8	-	-	-	-	-	-	-	-	-	
32	BRAKE	24	17	23	24	24	24	24	17	14	14	24	24	24	17	17	17	17	17	17	17	17	17	
33	COMMON BRAKE	9	14	22	9	9	9	9	9	5	5	9	9	9	9	9	9	9	9	9	9	9	9	
38	COMMON TURN	9	22	9	9	9	9	9	9	5	5	9	9	9	9	9	9	9	9	9	9	9	9	
39	TURN LEFT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
40	TURN RIGHT 1-4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
41	COMMON TURN ST.2; 3; 4	17	-	17	-	-	-	-	16	-	-	-	-	-	-	-	-	-	-	-	-	-	16	
42	TURN R / L 4-2 / 2-4	16	-	16	-	-	-	-	22	-	-	-	-	-	-	-	-	-	-	-	-	-	22	
43	TURN R / L 4-3 / 3-4	18	-	-	-	-	-	-	23	-	-	-	-	-	-	-	-	-	-	-	-	-	23	
44	TURN R / L 4 / 4	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
34	POTI "A"																							
35	POTI "D"																							
36	POTI "C"																							
37	POTI "B"																							
CABLE-NO.: Compact-V_D_R20_20		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
CODE 14 : ;:2;3;4;::;::;		Note: Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!																						

Subject to change without notice.

NO - Relay contacts are open in rest position.

NC - Relay contacts are closed in rest position.

CODE 15 CONNECTING DIAGRAM KRØLL		Crane Type / Drawing No.		
		Nr.:162		
		K-36/39		
Wire No.	Function:	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	1		
2	COMMON EMERGENCY STOP	1		
3	EMERGENCY STOP	3		
4	COMMON TROLLEY; TURN ST.3	25		
5	TROLLEY FORWARD 1-3	-		
6	TROLLEY FORWARD 2-3	-		
7	TROLLEY BACKWARD 1-3	24		
8	TROLLEY BACKWARD 2-3	27		
9	POWER SUPPLY N. AC	2		
10	TURN R / L 4-3 / 3-4	-		
11	COMMON HOIST	5		
12	LOWER 1-3	9		
13	LIFT 1-3	8		
14	LOWER 2-3	10		
15	LIFT 2-3	10		
16	LIFT / LOWER 3 / 3	11		
17	COMMON TURN	5		
18	TURN RIGHT 1-4	18		
19	TURN RIGHT 2-4	19		
20	TURN LEFT 1-4	17		
21	COMMON HORN; ON	3		
22	TURN LEFT 2-4	19		
23	0-POSITION TURN	-		
24	HORN NC	-		
25	HORN NO	32		
26	ON	4		
27	COMMON BRAKE; 0-POSITION HOIST	5		
28	BRAKE NC	20		
29	BRAKE NO	-		
30	LIFT / LOWER 3-1 / 1-3	-		
31	0-POSITION HOIST	-		
32	2/4 PART WIRE	7		
33	COMMON 2/4 PART WIRE	6		
38	COMMON TROLLEY FWD ST.1, 2	22		
39	TROLLEY FORWARD 2-3	26		
40	TROLLEY FORWARD 1-3	23		
41	COMMON TROLLEY BWD ST.1, 2	-		
42	TROLLEY BACKWARD 1-3	-		
43	TROLLEY BACKWARD 2-3	-		
44				
34	POTI "A"	-		
35	POTI "D"	-		
36	POTI "C"	-		
37	POTI "B"	-		
CABLE-NO.: Compact-V_D_R20_21		01	02	03
CODE 15 : ;1;2;3;4;-;-;-;		Note:		

CODE 16 CONNECTING DIAGRAM KRØLL		Crane Type / Drawing No.		
		76436		
		K-35 K30/33		
Wire No.	Function:	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	31	31	
2	COMMON EMERGENCY STOP	16	16	
3	EMERGENCY STOP	1	1	
4	COMMON TROLLEY; TRAVEL	1	1	
5	TROLLEY FORWARD 1-3	12	12	
6	TROLLEY BACKWARD 1-3	13	13	
7	TROLLEY FWD/BWD 3-2/2-3	-	-	
8	TRAVEL LEFT 1-3	7	7	
9	POWER SUPPLY N. AC	32	32	
10	TRAVEL RIGHT 1-3	6	6	
11	COMMON HOIST	18	18	
12	LOWER 1-3	5	5	
13	LIFT 1-3	4	4	
14	LIFT / LOWER 3-2/2-3	2	2	
15	LIFT / LOWER 3 / 3	19	19	
16	0-POSITION HOIST	-	-	
17	COMMON TURN	1	1	
18	TURN RIGHT 1-4	9	9	
19	TURN RIGHT 2-4	11	11	
20	TURN LEFT 1-4	8	8	
21	COMMON HORN; ON	29	29	
22	TURN LEFT 2-4	10	10	
23	TURN LEFT/RIGHT 4-3/3-4	28	28	
24	HORN NC	-	-	
25	HORN NO	15	15	
26	ON	30	30	
27	COMMON BRAKE; TRAVEL ST.2	25	1	
28	BRAKE NC	26	-	
29	BRAKE NO	-	-	
30	TRAVEL LEFT/RIGHT 3-2/2-3	21	21	
31				
32	2/4 PART WIRE	24	24	
33	COMMON 2/4 PART WIRE	23	23	
38	COMMON TROLLEY ST.1	-		
39	TROLLEY BACKWARD 1-3	-		
40	TROLLEY FORWARD 1-3	-		
41	COMMON TROLLEY ST.2; TRAVEL	-		
42	TROLLEY FWD/BWD 3-2/2-3	-		
43	TRAVEL LEFT 1-3	-		
44	TRAVEL RIGHT 1-3	-		
34	POTI "A"	-		
35	POTI "D"	-		
36	POTI "C"	-		
37	POTI "B"	-		
CABLE-NO.: Compact-V_D_R20_22		01	02	03
CODE 16 : ;-;-;-;-5;-;-;-;		Note:		

CODE 17 CONNECTING DIAGRAM KRØLL		Crane Type / Drawing No.		
		K-60		
Wire No.	Function:	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	27		
2	COMMON EMERGENCY STOP	27		
3	EMERGENCY STOP	1		
4	COMMON TURN	1		
5	TURN RIGHT 1-2	16		
6	TURN LEFT 1-2	15		
7	TURN RIGHT 2-4	17		
8	TURN LEFT 2-4	18		
9	POWER SUPPLY N. AC	28		
10	TURN RIGHT 3-4	21		
11	COMMON HOIST	9		
12	LOWER 1-3	7		
13	LIFT 1-3	6		
14	LOWER 2-3	3		
15	LIFT 2-3	2		
16	LIFT / LOWER 3 / 3	4		
17	COMMON TROLLEY; TURN; HORN	1		
18	TURN LEFT 3-4	20		
19	TROLLEY BACKWARD 1-3	23		
20	TROLLEY BACKWARD 2-3	25		
21	COMMON BRAKE; ON	1		
22	TROLLEY BACKWARD 1-3	26		
23	HORN	32		
24	BRAKE NC	19		
25	BRAKE NO	-		
26	ON	-		
27	COMMON TROLLEY FWD	29		
28		-		
29	TROLLEY FORWARD 1-3	22		
30	TROLLEY FORWARD 2-3	24		
31		-		
32	TROLLEY FORWARD 1-3	26		
33	COMMON TROLLEY FWD	29		
38	COMMON TURN	-		
39	TURN LEFT 1-2	-		
40	TURN RIGHT 1-2	-		
41	COMMON TURN	-		
42	TURN RIGHT 2-4	-		
43	TURN LEFT 2-4	-		
44	TURN RIGHT 3-4	-		
34	POTI "A"	-		
35	POTI "D"	-		
36	POTI "C"	-		
37	POTI "B"	-		
CABLE-NO.: Compact-V_D_R20_23		01	02	23
CODE 17 : ;1;-;-;-5;-;-;-;		Note:		

Subject to change without notice.

CODE 18 CONNECTING DIAGRAM LIEBHERR		Crane Type / Drawing No.:																						
		4005 2967	4005 2954	4005 21308	4005 21385	4005 2883	4005 2895	4005 2916	4005 21018	4005 2753	4005 21495	4005 2955	4005 21074	4005 21322	4005 21346	4005 21395	4005 21140	4005 21216	4005 21433	4005 21091	4005 21026	4005 21101	4005 21263	4005 21449
		13K_2	20K_7	20K_8	20K_9	20K_10	20K_11	20K_12	21K_2	22K32_2	26/32K_2	27K_3	27K_4	28K_4	28K_5	28K_6	33K_2	35K_2	35K_3	40K_2	48K_2	48.1K_2	50K_3	50K_4
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	2	2	2	2	1	1	1	2	1	2	2	2	2	2	2	2	2	2	2	2	2	2	2
2	COMMON EMERGENCY STOP	2	2	2	2	1	1	1	2	1	2	2	2	2	2	2	2	2	2	2	2	2	2	2
3	EMERGENCY STOP	5	5	5	5	3	3	3	5	3	5	5	5	5	5	5	5	5	3	3	5	5	5	3
4	COM. HOIST; WORK/MONTAGE	3	3	3	3	4	4	4	3	4	7	3	3	3	7	3	3	7	3	3	7	3	3	7
5	LOWER 1-3	18	18	18	18	6	6	6	18	6	21	18	18	18	18	21	18	18	21	18	20	18	20	21
6	LIFT 1-3	17	17	17	17	5	5	5	17	5	20	17	17	17	17	20	17	17	20	17	19	17	19	20
7	LIFT / LOWER 3-2 / 2-3	19	19	19	19	7	7	7	19	7	23	19	19	19	19	23	19	19	23	19	21	19	21	23
8	LIFT / LOWER 3 / 3	20	20	20	20	8	8	8	20	8	24	20	20	20	20	24	20	20	24	20	22	20	22	24
9	POWER SUPPLY N. AC	1	1	1	24	24	24	24	1	24	1	1	1	1	1	1	1	External	1	24	1	1	1	1
10	WORK / MONTAGE POS.3	22	22	22	-	-	-	-	22	-	19	22	22	22	22	19	22	22	19	-	18	-	18	19
11	COMMON TURN	3	3	3	3	4	4	4	3	4	7	3	3	3	7	3	3	7	3	3	7	3	7	7
12	TURN RIGHT 1-4	7	7	7	7	13	13	13	7	13	9	7	7	7	7	9	7	7	9	7	7	7	7	9
13	TURN LEFT 1-4	8	8	8	8	14	14	14	8	14	10	8	8	8	8	10	8	8	10	8	8	8	8	10
14	TURN R / L 4-2 / 2-4	9	9	9	9	-	-	-	9	15	11	9	9	9	9	11	9	9	11	9	9	21	9	-
15	TURN R / L 4-3 / 3-4	11	11	11	11	-	-	-	11	-	12	11	11	11	11	12	11	11	12	11	10	22	10	12
16	TURN R / L 4 / 4	21	21	21	21	-	-	-	21	-	-	21	21	21	21	-	21	21	-	21	11	9	11	-
17	COM. TROLL.; TRAVEL	3	3	3	3	4	4	4	3	4	7	3	3	3	3	7	3	3	7	3	3	3	7	7
18	TROLLEY FORWARD 1-3	15	15	15	15	10	10	10	15	10	17	15	15	15	15	17	15	15	17	15	16	15	16	17
19	TROLLEY BACKWARD 1-3	14	14	14	14	9	9	9	14	9	16	14	14	14	14	16	14	14	16	14	15	14	15	16
20	TROLLEY FWD/BWD 3-2 / 2-3	16	16	16	16	-	-	-	16	-	18	16	16	16	16	18	16	16	18	16	17	16	17	18
21	COMMON BRAKE; ON	5	5	5	5	3	3	3	5	3	5	5	5	5	5	3	5	5	3	5	5	5	3	3
22	TRAVEL LEFT	13	13	13	13	12	12	12	13	12	15	13	13	13	13	15	13	13	15	13	14	13	14	15
23	TRAVEL RIGHT	12	12	12	12	11	11	11	12	11	14	12	12	12	12	14	12	12	14	12	13	12	13	14
24	BRAKE NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
25	BRAKE NO	10	10	10	10	16	16	16	10	16	13	10	10	10	10	13	10	10	13	10	12	10	12	13
26	ON	4	4	4	4	2	2	2	4	2	4	4	4	4	4	4	4	4	4	4	4	4	4	4
27	COM. HORN; ON / OFF	5	5	5	5	3	3	3	5	3	3	5	5	5	5	3	5	5	3	3	5	5	5	3
28	HORN NC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
29	HORN NO	6	6	6	6	17	17	17	6	17	8	6	6	6	6	8	6	6	8	6	6	6	6	8
30	ON / OFF NO (set/reset)	-	-	-	-	-	-	-	-	-	6	-	-	-	-	6	-	-	6	-	-	-	6	-
31	ON / OFF NC (set/reset)	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
32	BYPASS	24	24	24	-	-	-	-	24	-	22	24	24	24	24	22	24	24	22	-	23	-	23	22
33	COMMON BYPASS	23	23	23	-	-	-	-	23	-	7	23	23	23	23	7	23	23	7	-	3	-	3	7
38	COMMON HOIST	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
39	LOWER 1-3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
40	LIFT 1-3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
41	COM. HOIST; WORK/MONTAGE	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	14	-	-	-	-	-	-
42	LIFT / LOWER 3-2 / 2-3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-	-
43	LIFT / LOWER 3 / 3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
44	WORK / MONTAGE POS.3	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
34	POTI "A"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
35	POTI "D"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
36	POTI "C"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
37	POTI "B"	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
CABLE-NO.: Compact-V_D_R20_16		01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
CODE 18: ;;2;;5;;;		Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!																						

Subject to change without notice.

NO - Relay contacts are open in rest position.

NC - Relay contacts are closed in rest position.

CODE 18 CONNECTING DIAGRAM <b>LIEBHERR</b>		Crane Type / Drawing No.:								
		4005	4005	4005	4005					
		21101	21101	21206	21263					
		60K_3	60K_4	60K_5	63K_2					
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC	2	2	2	2					
2	COMMON EMERGENCY STOP	2	2	2	2					
3	EMERGENCY STOP	5	5	5	5					
4	COM. HOIST; WORK/MONTAGE	3	3	3	3					
5	LOWER 1-3	7	18	18	20					
6	LIFT 1-3	8	17	17	19					
7	LIFT / LOWER 3-2 / 2-3	21	19	19	21					
8	LIFT / LOWER 3 / 3	22	20	20	22					
9	POWER SUPPLY N. AC	1	1	1	1					
10	WORK / MONTAGE POS.3	9	-	-	18					
11	COMMON TURN	3	3	3	3					
12	TURN RIGHT 1-4	18	7	7	7					
13	TURN LEFT 1-4	17	8	8	8					
14	TURN R / L 4-2 / 2-4	19	21	21	9					
15	TURN R / L 4-3 / 3-4	20	22	22	10					
16	TURN R / L 4 / 4	-	9	9	11					
17	COM. TROL.; TRAVEL	3	3	3	3					
18	TROLLEY FORWARD 1-3	15	15	15	16					
19	TROLLEY BACKWARD 1-3	14	14	14	15					
20	TROLLEY FWD/BWD 3-2 / 2-3	16	16	16	17					
21	COMMON BRAKE; ON	5	5	5	5					
22	TRAVEL LEFT	13	13	13	14					
23	TRAVEL RIGHT	12	12	12	13					
24	BRAKE NC									
25	BRAKE NO	10	10	10	12					
26	ON	4	4	4	4					
27	COM. HORN; ON / OFF	5	5	5	5					
28	HORN NC									
29	HORN NO	6	6	6	6					
30	ON / OFF NO (set/reset)	-	-	-	-					
31	ON / OFF NC (set/reset)									
32	BYPASS	-	-	-	23					
33	COMMON BYPASS	-	-	-	3					
38	COMMON HOIST	-	-	-	-					
39	LOWER 1-3	-	-	-	-					
40	LIFT 1-3	-	-	-	-					
41	COM. HOIST; WORK/MONTAGE	-	-	-	-					
42	LIFT / LOWER 3-2 / 2-3	-	-	-	-					
43	LIFT / LOWER 3 / 3	-	-	-	-					
44	WORK / MONTAGE POS.3	-	-	-	-					
34	POTI "A"	-	-	-	-					
35	POTI "D"	-	-	-	-					
36	POTI "C"	-	-	-	-					
37	POTI "B"	-	-	-	-					
CABLE-NO.: Compact-V_D_R20_16		01	02	03	04	05	06	07	08	09
CODE 18: ;-;2;-;5;-;:-;:-; Note:		Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!								

Subject to change without notice.

NO - Relay contacts are open in rest position.

CODE 18 CONNECTING DIAGRAM		Crane Type / Drawing No.:								
Wire No.	Function:	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.	Pin No.
1	POWER SUPPLY PH. AC									
2	COMMON EMERGENCY STOP									
3	EMERGENCY STOP									
4	COM. HOIST; WORK/MONTAGE									
5	LOWER 1-3									
6	LIFT 1-3									
7	LIFT / LOWER 3-2 / 2-3									
8	LIFT / LOWER 3 / 3									
9	POWER SUPPLY N. AC									
10	WORK / MONTAGE POS.3									
11	COMMON TURN									
12	TURN RIGHT 1-4									
13	TURN LEFT 1-4									
14	TURN R / L 4-2 / 2-4									
15	TURN R / L 4-3 / 3-4									
16	TURN R / L 4 / 4									
17	COM. TROL.; TRAVEL									
18	TROLLEY FORWARD 1-3									
19	TROLLEY BACKWARD 1-3									
20	TROLLEY FWD/BWD 3-2 / 2-3									
21	COMMON BRAKE; ON									
22	TRAVEL LEFT									
23	TRAVEL RIGHT									
24	BRAKE NC									
25	BRAKE NO									
26	ON									
27	COM. HORN; ON / OFF									
28	HORN NC									
29	HORN NO									
30	ON / OFF NO (set/reset)									
31	ON / OFF NC (set/reset)									
32	BYPASS									
33	COMMON BYPASS									
38	COMMON HOIST									
39	LOWER 1-3									
40	LIFT 1-3									
41	COM. HOIST; WORK/MONTAGE									
42	LIFT / LOWER 3-2 / 2-3									
43	LIFT / LOWER 3 / 3									
44	WORK / MONTAGE POS.3									
34	POTI "A"									
35	POTI "D"									
36	POTI "C"									
37	POTI "B"									
CABLE-NO.: Compact-V_D_R20_16		01	02	03	04	05	06	07	08	09
Note:		Relay BRAKE works in inverted condition and is activated by relay EMERGENCY STOP!								

NC - Relay contacts are closed in rest position.